Welcome to Control Play!



Enjoy your new Control Play console and the many benefits it brings to your business.

- Pre-loaded Control Play software and music video library
- Automatic content updates
- Pre-configured, plug and play
- Optional monitor display
- Optional Keyboard + mouse
- Unlimited tech support access



Contol Play's team has done an audio/video system audit with you to ensure compatibility before this console was delivered. All necessary adapters/cables are included in this box.

Our Support Team is here to assist with each stage of setup and installation. if you need any assistance, please call us at: **1-866-896-3470 ext.1** or Chat: **controlplay.com/contact**

Technical Requirements

Audio

The console comes with a regular stereo, line-level audio output: 1/8" (3.5mm). This output connects directly to your mixer or sound equipment using an audio cable.

Video

This console is equipped with HDMI and DisplayPort video outputs. S-Video, Component, and Composite video output requires a separate adapter. A video distribution system is recommended. Contact Control Play Support if you have any questions about your video connections.

Internet

A direct, hard-wired connection from your router or modem is recommended for the most reliable performance. The internet connection download speed should be a minimum of 3 Mbps for optimal results.


Electrical

To maintain warranty coverage for electronic components, ensure the console is plugged into a surge protection device. For maximum protection and reliability, an Uninterruptible Power Supply (UPS) is recommended—this can be purchased at any electronics or computer store.



Setup and Installation

1. Unpack the Control Play Console and Cables

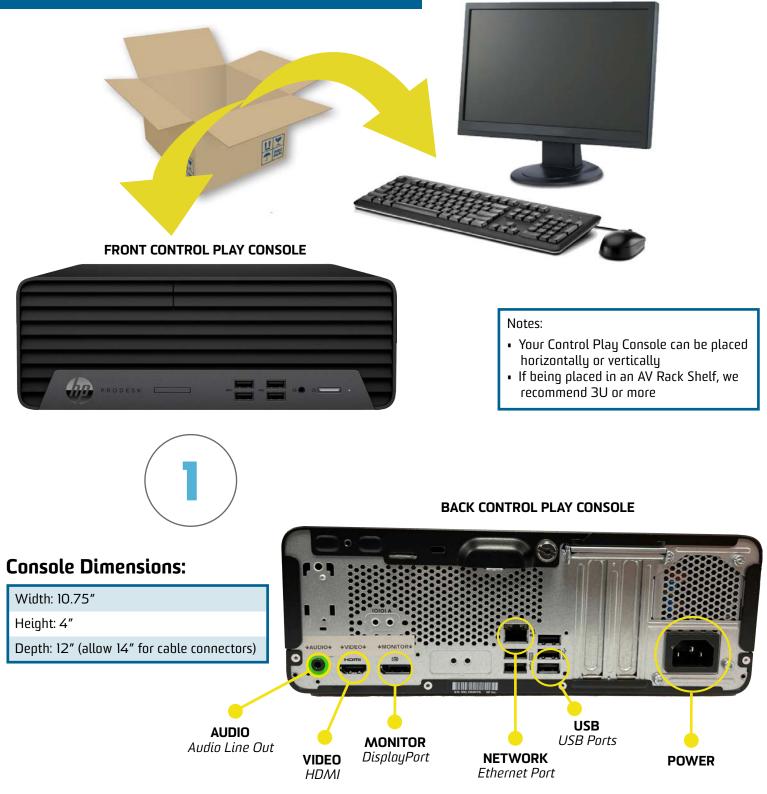



2. Connect Power



3. Connect Keyboard and Mouse (OPTIONAL)



4. Connect sound system




Optional Audio Upgrades

Contact our Support Team to inquire about upgrades






Music videos will show on TV or Projector screens

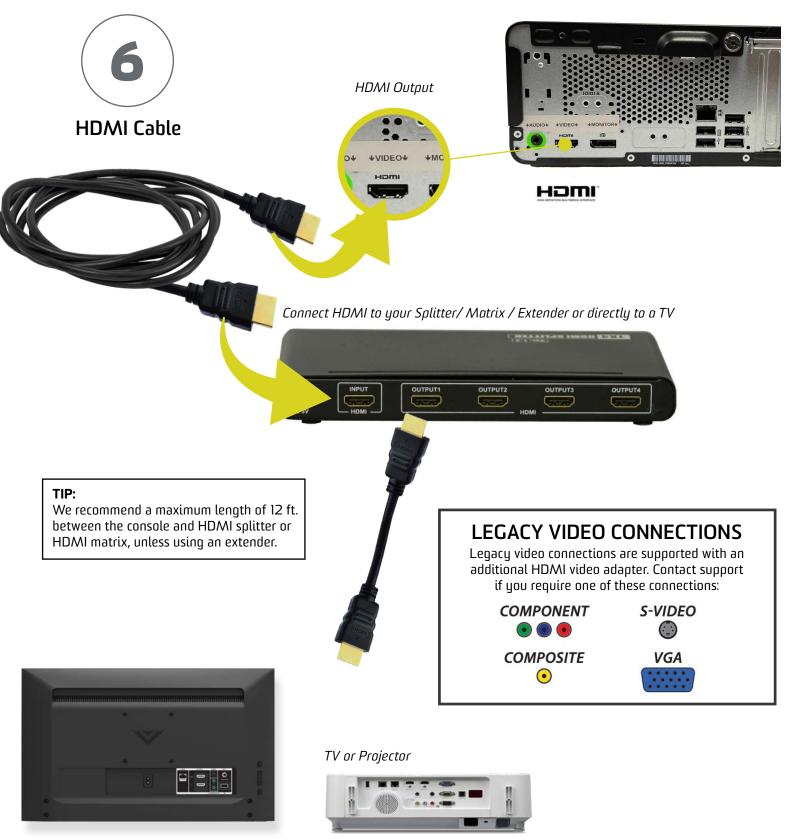



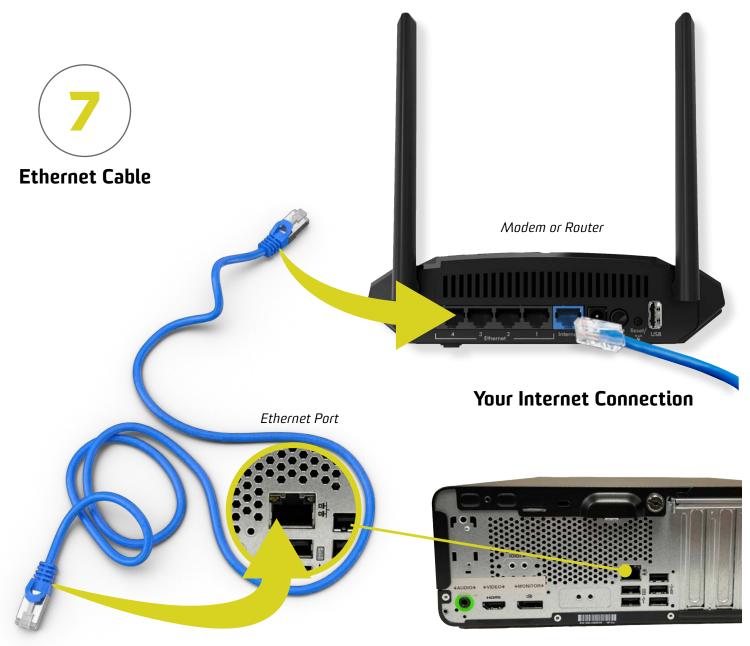

Back Control Play Console

NOTES:

We don't recommend the use of WIFI as your network connection due to reliability. A USB WIFI adapter must be purchased separately to use WIFI.



7. Connect Monitor (Optional)

The Player User Interface will be displayed on the monitor after setup and when powered on.



Connect VGA and Power Cable to Monitor



8. Turn on your Control Play Console with a press of the button!

The Music will start in 1-2 minutes



PLEASE NOTE: If the Player window loads on your TV/projector screens instead of your computer monitor, your displays need to be swapped. Please call our Support Team to configure the displays:
1-866-896-3470 ext. 1 or Chat: controlplay.com/contact

TUTORIALS

Once you've finished setting up your Control Play Video Console, visit our online tutorials page to learn everything you need to know about the console, player, and more! www.controlplay.com/tutorials

